



ChiplessSolutions

Chipless Firmware Manual for


Epson WF-3720, WF-3721, WF-3723, WF-3725

Step 1. Connect printer to PC by proper USB cable.

Step 2. Put printer in **Firmware Update Mode**.
(Ink cartridges and printer drivers are not required).

Power OFF the printer and not more then in 1 minute **press and hold** buttons:

RIGHT UPPER DISPLAY CORNER + POWER – wait 3-5 sec until on printer monitor you wil see **WHITE text - Firmware Update Mode** – then **Release all buttons**.
If text is in **red color** - that is wrong mode. Try once more time.

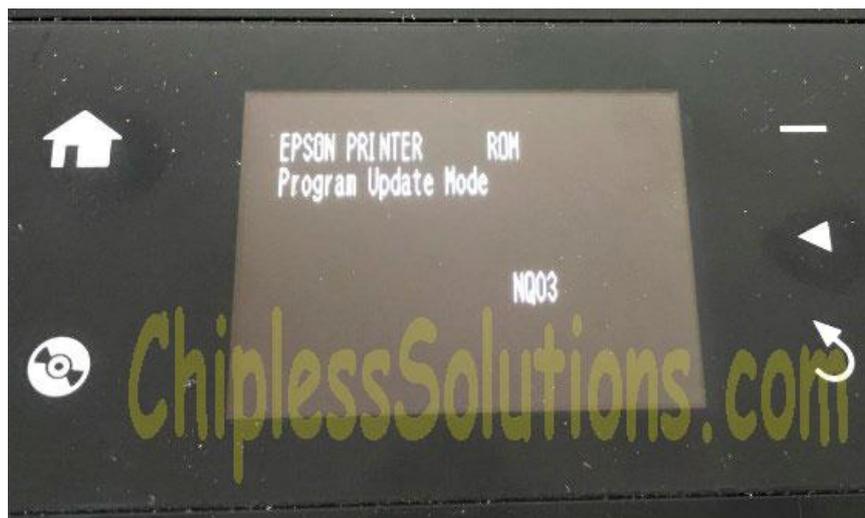


Step 3. Upload Firmware to printer.

Run **EPFWUPD.EXE** file and follow all steps until Firmware will upload in printer.

When Firmware Update is complete confirm that **new Firmware Version is displayed** on the LCD.

Press on the **CENTER of TOUCH SCREEN** – printer will turn **OFF**.

Name ^	Date modified
Resources	3/29/2018 6:08 PM
_ReadMe.doc	3/22/2018 4:50 PM
e_dge321.dl	2/7/2017 3:08 PM
ENBoost.dl	6/23/2017 6:33 PM
EPFWUPD.exe	6/23/2017 6:36 PM
FWE857TL.efu	2/6/2018 4:57 PM
Unzip32.dl	2/7/2017 3:08 PM

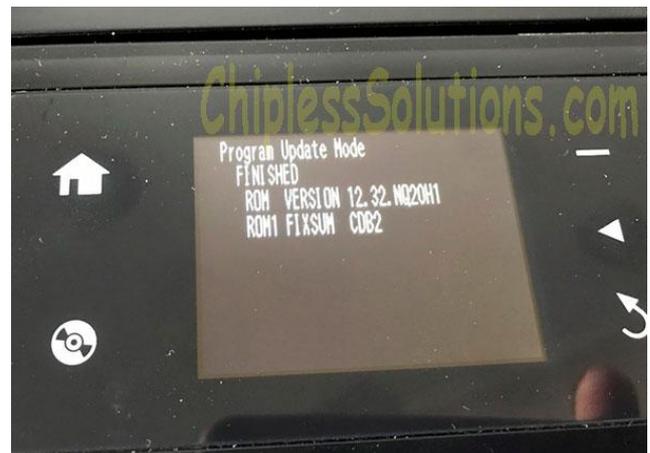

Step 4. Switch ON the printer.

Step 5. Run **License.exe** file, Select Language. Select printer model.

Name ^	Date modified	Type	Size
_ReadMe.pdf	3/29/2018 5:50 PM	Adobe Acrobat Document	571 KB
License.exe	3/29/2018 3:04 PM	Application	4,018 KB

Step 6. Click **Activate Online** button (1), Enter **Activation Key** (2) and click **OK** (3).

